








The Borg Modular Composter Recycled Plastic

Following the assembly instructions supplied with your Borg Composter, you will have no trouble to put it together the yourself.

You don't need any screws or nails; the panels slot into each other and are fixed in place with the connecting tubes.

The installation should not take you more than about 5 to 20 minutes to complete.

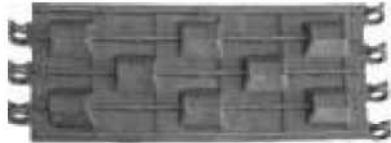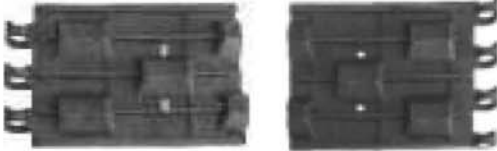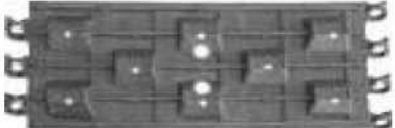


Borg Composter Kit Contents		
ITEM Description	QTY	Panels and Parts
Simple Panel 330 x 660mm -	11	
Half Panels for composter door 330 x 330mm	2	 <div style="display: flex; justify-content: space-around; width: 100%;"> right-door left-door </div>
Lid panels with ventilation holes 330 x 660mm	2	
Connecting tubes with caps length 500mm	8 (4 pairs)	
Shims for adjusting ventilation	4	

The Borg Composter Assembly Instructions

1. Lie the first panel (A) flat on the ground with rib side facing up as shown right.




2. Insert the half-panel door that has 3 hinges into the panel (A) on the side with 4 hinges as shown right.

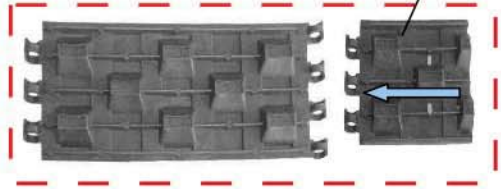


3. Insert all the (A) panels into each other as shown in the diagram at the bottom of this page.


4. Assemble the half-tubes (D) as shown right, which will give you 4 tubes about 500mm long.

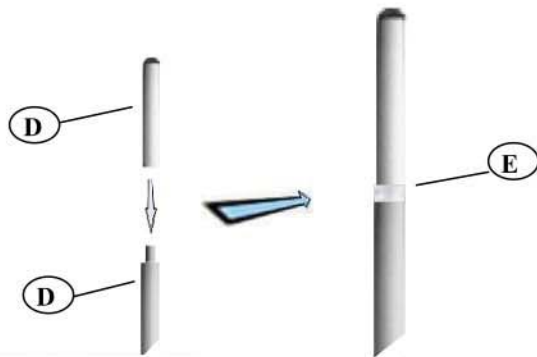

Thread 3 tubes through the interleaved hinges to connect your panels together, as shown below.

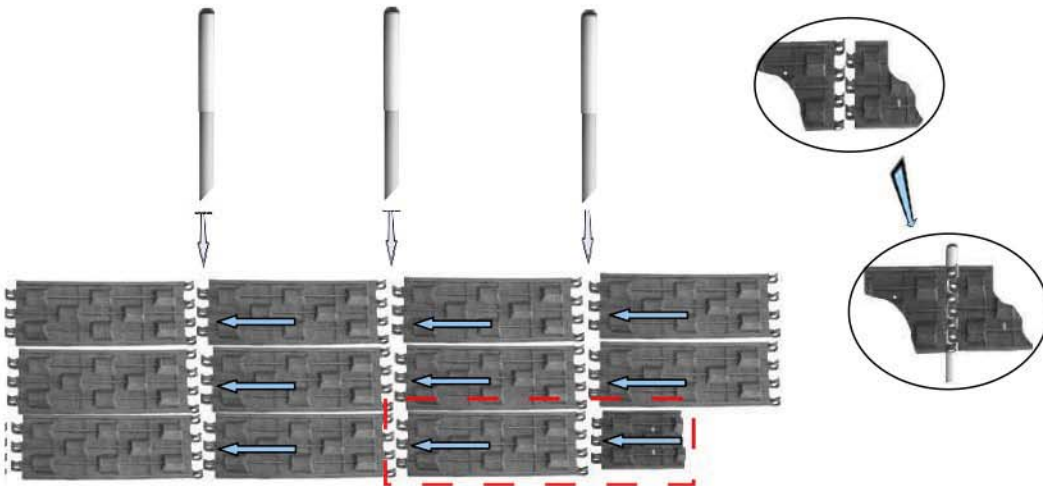


5. Fold the panels up to meet and stand the whole structure up with half panel at the bottom

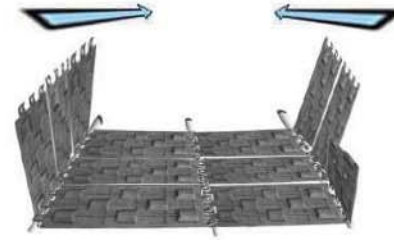

6. Add the left half of the door panel into position and put the last connecting tube through to hold the whole structure together as shown below left. You now have 4 sides and two hinged doors at the bottom on one side.



7. To complete your assembly just clip the two covers on the top.

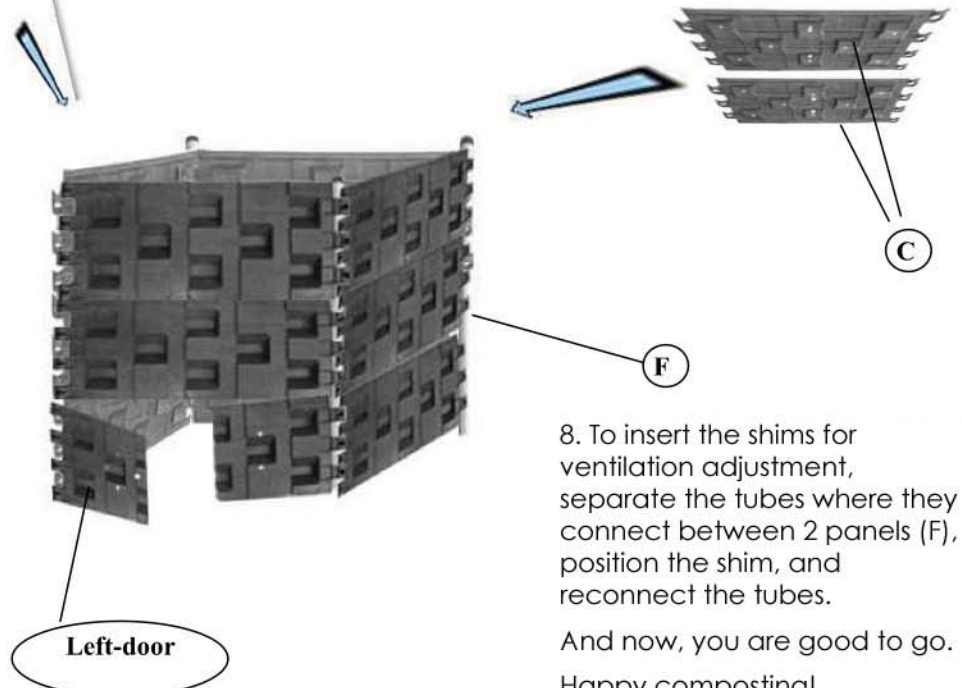

8. To insert the shims for ventilation adjustment, separate the tubes where they connect between 2 panels (F), position the shim, and reconnect the tubes.

And now, you are good to go.
Happy composting!